

Installation Instructions

Fuel Filter

1. Open the water drain valve and empty the fuel into an appropriate container.
2. When draining slows, open the fuel filter housing lid until all fuel is removed.
3. Close the water drain valve.
4. Remove the fuel filter housing lid from the housing.
5. Remove the fuel filter and housing o-ring and dispose of properly.
6. Wipe clean the sealing areas on the housing lid and housing.
7. Install the provided new o-ring and fuel filter onto the fuel filter housing lid.
8. Rub a thin layer of clean diesel fuel on the housing lid threads and new o-ring.
9. Install the housing lid using a clockwise rotational motion. Tighten the housing lid to a recommended 25 Nm or 18 ft-lbs. Do not over tighten.

Fuel Strainer

1. Remove the fuel strainer housing lid from the housing.
2. Remove the housing o-ring and dispose of properly.
3. Remove the fuel strainer and clean.
4. Wipe clean the sealing areas on the fuel strainer housing lid and housing.
5. Reattach the fuel strainer onto the fuel strainer housing lid.
6. Install the provided new o-ring onto the fuel strainer housing lid.
7. Rub a thin layer of clean diesel fuel on the housing lid threads and new o-ring.
8. Install the fuel strainer housing lid using a clockwise rotational motion. Tighten the housing lid to a recommended 17 Nm or 13 ft-lbs. Do not over tighten.

Final Steps

1. Prime fuel into fuel filter housing.
2. Start engine and check for leaks.
3. If leaks observed, turn engine off and repeat steps as needed.

